



# Crime Prevention Products

Copsham House, 53 Broad Street,  
Chesham, Buckinghamshire, HP22 5WH  
Tel : 01494 792592 Fax : 01494 792590

---



## **GLASS GUARD ALARM**

**PRODUCT CODE: CPP-DW28**

### INSTALLATION

Use the sticker at the back of the unit to stick the unit on glass pane, door or window.

### OPERATION

1. Turn the switch at the left side to 'high' or 'low' to begin operating. A signal will be given out to announce the unit is in good condition. When the glass is hit, knocked or cut by anyone, the siren will sound for 10-20 seconds.
2. The unit can be set to high or low sensitivity. 'High Sensitive' mode will detect a little vibration. 'Low Sensitive' mode will need a stronger vibration to make the unit react.
3. The unit will also perform well on wooden or metallic windows and doors.
4. If the unit is not placed in the middle of the door or window, use 'High' mode.

### BATTERIES

Operated by 2x1.5v AAA batteries. Always check to avoid battery low. (Battery not included).