 
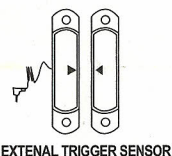 


## INTRUDER ALARM PIR MOTION DETECT ALARM

### Installation & Setup

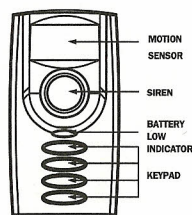

 
EXTERNAL TRIGGER SENSOR

### Wall Mounting

The Keypad Operated Intruder Alarm can be wall mounted either directly to the wall or with the bracket. The ball and socket bracket will give you the flexibility to direct the motion sensor to a desired area.

1. When mounting directly to the wall, choose desired location and securely screw into wall. Insert the screw into the hole at the back of the unit.
2. For the ball and socket mounting, choose desired location and secure the bracket to the wall as shown.

Slide and insert the bracket into the back of the unit and lock in place.

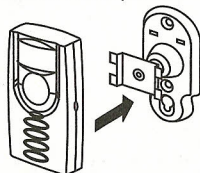

The Keypad Operated Intruder Alarm combines a built in PIR motion sensor and an external magnetic contact trigger (included); the unit is compatible with an optional External Siren EL00076 (not included).


### To Install & Setup The Magnetic Contact Trigger:

 1. Remove screw at base of compartment and slide off the cover.
2. Insert the plug of the magnetic contact trigger into the correct socket, refer to the instruction diagram showing the inside of the compartment.
3. Replace the cover and screw closed. Pull the wire out through the slot of the cover.
4. Using double sided adhesive tape, mount the magnetic contact trigger to the edge of the door frame. Make sure the arrows on the sensors align ensuring there is less than a 1/2" gap.

### To Install the External Siren – EL00076 (Optional)

1. Remove the screw at the base of compartment and slide off cover.

2. Insert the plug of the External Siren into the correct socket, refer to the instruction diagram showing the inside of the compartment
3. Replace the cover and screw closed. Pull the wire through the slot of the cover.



### Installing Batteries

The unit requires 3 x AAA Alkaline batteries. If the batteries need to be replaced, a slow flashing of the red light will indicate low battery. In the alarm mode, the low battery indicator will begin flashing after the code is inputted. In all other modes, the low battery indicator will flash each time motion is sensed. Average battery life for typical usage is 1 year.

 
### To Install Batteries

1. Remove the screw at the base of compartment and slide off cover.
2. Insert 3 x AAA batteries noting the polarity diagram inside the battery compartment.
3. Replace the cover and screw closed.

### IMPORTANT:

Remove batteries before storing the alarm for long periods of time.

Batteries corrode over time and may cause permanent damage to the unit. Different types of batteries or new and used batteries should not be mixed. Depleted batteries should be removed from the unit and disposed of properly.

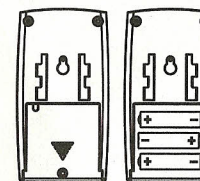

### Setting the 4-Digit Code

1. Remove the screw at the base of compartment and slide off cover.
2. Press the LEARN button. The red light will blink for 15 seconds. During this time, input your 4 digit code. A beep will confirm the input.
3. Replace the cover and screw closed.

### Operating the Alarm

Activating the Alarm:

1. Activate the alarm by pressing your 4-digit code. There will be a 30 second exit delay which allows time for you to leave the protected area without triggering the alarm.

Deactivating the Alarm:

1. When returning to the protected area simply enter your 4-digit code within 15 seconds to deactivate the alarm.

When the fourth digit of your code is entered, the unit will respond with a deeper tone. The unit will beep once if motion is sensed. If the correct code is not entered within 15 seconds the alarm will sound. Enter the correct code at anytime after the alarm has sounded to deactivate.

### Range Of Detection

The Motion Sensor has a 15-20ft detection zone, with approximate angles of 110 degree horizontal x 70 degree vertical.

### Care & Maintenance

To clean the unit housing, use a soft cloth slightly dampened with water and wipe dry. Do not use chemical agents as this may damage and discolour the unit.

### WARNING:

**RISK OF PERSONAL INJURY  
PROLONGED EXPOSURE TO ALARM SIREN  
MAY CAUSE PERMANENT HEARING LOSS  
FOR INDOOR USE ONLY  
DO NOT USE IN WET LOCATIONS**

**Product code: EL00022**